

# ODX-6000

## 6000VA DC/AC INVERTER

### GENERAL FEATURES:

- Sine wave output voltage
- Suitable for motors control
- Adjustable output frequency
- Adjustable output voltage
- High input-output isolation 3000Vrms
- Remote off opto-coupled
- Alarm by isolated relay contacts
- Configurable input: Reverse or Mid power
- Remote control via RS232
- CAN BUS (optional)
- Parallelable output (optional)
- Railway version EN50155 (optional)
- Fire and smoke: EN45545-2 approved



**3 YEAR  
WARRANTY  
INDUSTRY**

 ROHS  
REACH

 PAM  
Tool

**5 YEAR  
WARRANTY  
RAILWAY**

 EN50155

 EN45545  
fire & smoke

	24Vdc 16.8 ... 30V	48Vdc 33.6 ... 60V	72Vdc 50.4 ... 90V	110Vdc 77 ... 138V
400Vac	<b>ODX-6000-7502</b> 3500 W	<b>ODX-6000-7505</b> 6000 W	<b>ODX-6000-7506</b> 6000 W	<b>ODX-6000-7507</b> 6000 W

**INPUT**

Input voltage range	-30, +25% Vin nom
Maximum input ripple	5% Vin nom (Vrms, 100Hz)

**OUTPUT**

Nominal output voltage (Von)	See table
Output voltage range	20...100% of Von (adjust via remote control)
Output frequency	50 / 60Hz via DIP-switch, 5...75Hz via RS-232
Load regulation	< 4.5%
Line regulation	< 2% Vin -25% ... +25%, < 10% Vin -30% ... +30%
Output wave distortion THD	< 2% (average of 16 samples)
Output HF ripple	< 2.5%

**ENVIRONMENTAL**

Storage temperature	-25 ... 80°C
Operating temperature:	
Full load	-25 ... 55°C (EN50155 OT1)
62.5% load	-25 ... 70°C (EN50155 OT3)
25% load	-25 ... 85°C (EN50155 OT5)
Relative humidity without condensation	5 ... 95%
Cooling	Internal controlled internal fan
MTBF (MIL-HDBK-217-E; Gb, 25°C)	100.000 h

**EMC**

Immunity according	EN61000-6-2, EN50121-3-2
Emissions according	EN61000-6-4, EN50121-3-2

**SAFETY**

Dielectric strength: Input /output	3000Vrms / 50Hz / 1min
Dielectric strength: Output / Earth	1500Vrms / 50Hz / 1min
Dielectric strength: Input / Earth	500Vrms / 50Hz / 1min
Safety according to	EN60950-1, EN62368-1
Fire and smoke	EN45545-2 approved

**MECHANICAL**

Weight	< 8950 g
Shock and Vibrations according to	EN61393:2011 Category 1 Class B
Protection degree	IP20

**PROTECTIONS**

Against overloads	Current and I <sup>2</sup> T limited (see overload protection curve)
Against over-temperature	Shutdown with auto-recovery

**CONTROL**


Output OK LED	Green
Input OK LED	Green
Alarm LED	Red
Input alarm	Open when alarm. Maximum rating: 0.16A at 160Vdc
Output alarm	Open when alarm. Maximum rating: 0.16A at 160Vdc
Remote OFF input	Off applying 15...143 Vdc, Impedance >35kΩ
Configurable input (reverse or mid-power)	ON: applying 15...143 Vdc, Impedance >35kΩ



## ORDERING CODES

Model	Input voltage DC [V]	Input voltage range [V]	Max. Input current [A]	Output voltage AC [V]	Output current [A]	Active output power [W]	Appar. output power [VA]	Output peak current		Efficien. [%]	No load input current [A]
								5s (rms) [A]	(lopk) 10ms [A]		
<b>ODX-6000-7502</b>	24	16.8 - 30	232	400	6.50	3500	4500	7.8A	20	91.0	1.70
<b>ODX-6000-7503</b>	24	16.8 - 30	294	400	8.66	4500	6000	9.7A	20	91.0	1.70
<b>ODX-6000-7505</b>	48	33.6 - 60	191	400	8.66	6000	6000	11.5	20	93.6	0.85
<b>ODX-6000-7506</b>	72	50.4 - 90	127	400	8.66	6000	6000	11.5	20	94.3	0.58
<b>ODX-6000-7507</b>	110	77 - 138	83	400	8.66	6000	6000	11.5	20	94.2	0.38


ODX-6000-75\_ \_ -

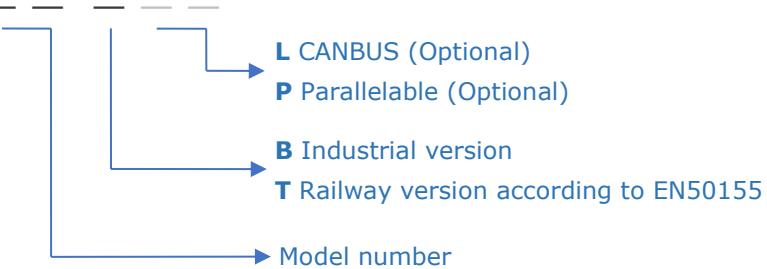


Accessories must be ordered in a separate order line

Please check availability for model ODX-6000-7503 or L and P options

## BLOCKS DIAGRAM

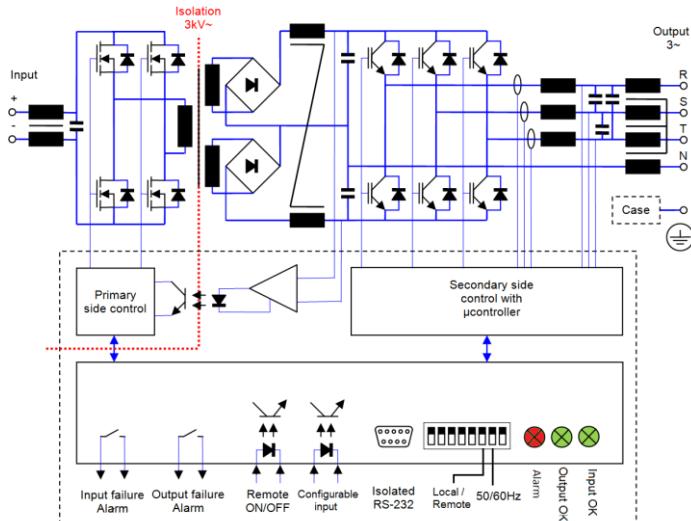


## CONNECTIONS

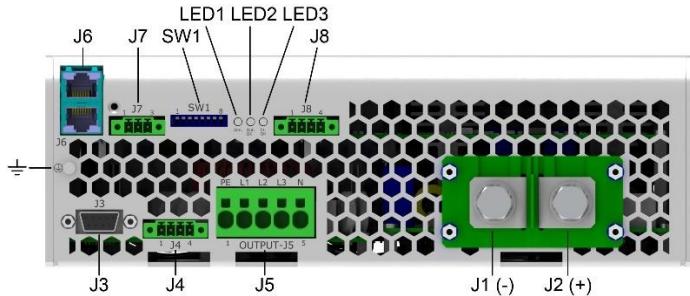

Terminal M8	
J1	-Vin
J2	+Vin
J5 - 1	Protective Earth
J5 - 2	Output R
J5 - 3	Output S
J5 - 4	Output T
J5 - 5	Output Neutral
J4 - 1	+ Configurable input
J4 - 2	- Configurable input
J4 - 3	+ Remote
J4 - 4	- Remote
J8 - 1	Status output
J8 - 2	Status output
J8 - 3	Status input
J8 - 4	Status input
J7 - 1	CAN L (optional Can bus)
J7 - 2	CAN H (optional Can bus)
J7 - 3	GND CAN
J3	RS-232
J6A - J6B	Optional Parallel operation

Cables 2.5 ... 4mm<sup>2</sup>

## POWER DERATING vs AMBIENT TEMP.

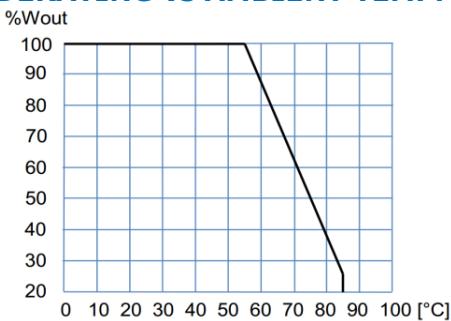

## DESCRIPTION

The ODX-6000 consists of three phase sine-wave DC-AC inverters with galvanic isolation between input and output.

The unit allows:

- Changing the output frequency by means of DIP-switch-7 of SW1. OFF: 50Hz or default programmed, ON: 60Hz
- Change local/remote (waiting RS-232 commands) by means of DIP-switch-6 of SW1. OFF: local, ON: remote
- Shutdown applying voltage output 15 to 143V on pins 3 and 4 of J4
- Start-up motors by means of a soft start. In the start-up, the output voltage rises linearly from 0V to set voltage and the frequency from the initial to the set one. The start-up ramp slope may be changed via RS-232
- Set the rotation speed of a motor according to the appropriate Voltage/Frequency ratio.
- Configurable input (pin 1 and 2 of J4):
  - Reverse mode: Changing the rotation direction for the next start-up of a motor by applying voltage between 15 and 143V.
  - Mid power mode: Changing the output frequency in V/F mode from nominal to a mid-power frequency by applying voltage between 15 and 143V.
- Monitoring the status of the input and output voltage through the contacts of two separate solid state relays.
- Set and monitor parameters via RS-232.

The ODX-6000 is equipped with a maximum average power protection as well as maximum output peak current protection. This protects the semiconductors even when an output short-circuit occurs. It also features a disable function for input under-voltage, which allows protecting the batteries from harmful discharges.

## START-UP

- The unit has 6 threaded holes for the fixation on a mounting surface.
- The unit has internal fans. For an appropriate cooling, the air input and output should be free of elements that cause and an air flow reduction (minimum recommended distance to other objects 90mm).
- Make connections as shown in the figure.
- The default output frequency is 50Hz. For 60Hz simply actuate the dip-switch as indicated in the figure.

### For safety reasons, the following requirements must be met:

- Provide the equipment with some kind of protective enclosure that complies with the electrical safety directives in effect within the country where the equipment is installed.
- Include an input fuse with a rating immediately higher than the maximum input current.
- Use cables of adequate cross-section to connect inputs and outputs. The following table lists the maximum currents and the minimum cross-sections for the cables used for each power connection.

	Input 24V	Input 48V	Input 72V	Input 110V	Output 400V
Maximum current	232 A	191 A	127 A	83 A	8.7 A
Cable cross-section	150 mm <sup>2</sup>	95 mm <sup>2</sup>	50 mm <sup>2</sup>	25 mm <sup>2</sup>	2.5 mm <sup>2</sup>



## RS232 communication port


It is possible to control and monitor de unit via RS232 by means of an application tool named PAM. This application is free and can be downloaded from the Premium web side

Also it is possible to control and monitor de unit directly using the protocol showed in table:


**Protocol configuration:** ASCII code, 57600 bauds, parity none, 8 bits, 1bit stop

Header	Function	Parameter	Returns	Explanation
P R	L G M	V	PTV####.	Input voltage in Volts
		v	PTv####.	Input voltage ripple in Volts
		Y	PTYRN=#### [13] YSN=#### [13] YTN=####	Output voltage in Volts RMS Phase-Neutral ([13] = char 13 of ASCII code)
		I	PTIR=#### [13] IS=#### [13] IT=####.	Output current in Amps RMS ([13] = char 13 of ASCII code)
		T	PTT####.	Internal temperature1 in K
		t	PTt####.	Internal temperature 2 in K
		F	PTF####.	Nominal output frequency in Hz
		f	PTf####.	Actual output frequency in Hz
		y	PTy####.	Actual output voltage set-point in V
		S	PTS####.	Inverter state <b>999.9</b> → Enabled <b>000.0</b> → Disabled <b>222.2</b> → Blocked by overload <b>111.1</b> → Blocked by overload or shortcircuit
		M	PTM####.	Model number
		R	PTR####.	Firmware version
		Other	PTE	Command not supported
		1 ####.	OK / ERR	Set the low input voltage timed shutdown in V
		2 ####.	OK / ERR	Set the minimum alarm input voltage in V
		3 ####.	OK / ERR	Change the status bit (after start up enabled with SW3 =LOCAL and disabled with SW3 =REMOTE) <b>999.9</b> → Inverter enabled <b>000.0</b> → Inverter disabled
		4 ####.	OK / ERR	Set the output voltage Phase-neutral in Vrms (Vo)(output must be stopped) 040.0 ≤ ####. ≤ 230.0
		5 ####.	OK / ERR	Set the maximum output current in Arms 20% I <sub>nom</sub> ≤ ####. ≤ 100% I <sub>nom</sub>
		6 ####.	OK / ERR	Set the nominal output frequency in Hz (F0) (output must be stopped) 005.0 ≤ ####. ≤ 075.0
		7 ####.	OK / ERR	Set the alarm maximum output current 0 < ####. ≤ 100% I <sub>max_warning</sub>
		8 ####.	OK / ERR	<b>111.1</b> → Reset the inverter
		L ####.	OK / ERR	Set the minimum input starting voltage in Volts
		O ####.	OK / ERR	Set the initial frequency in the startup (F1) 005.0 ≤ ####. ≤ 075.0
		P ####.	OK / ERR	Set the ramp-up in increment of "N" cycles per Hz in mode V/F, frequency changes or start-up (Note-1) 001.0 ≤ ####. ≤ 100.0
		Q ####.	OK / ERR	Set the ramp-down in decrement of "N" cycles per Hz in mode V/F (Note-1) 002.0 ≤ ####. ≤ 100.0
		Y ####.	OK / ERR	Change the working mode of the input J4-1,J4-2 <b>111.1</b> → Input as reverse phase control (default) <b>222.2</b> → Input as mid-power control (Note-2)
		X ####.	OK / ERR	Set the mid-power frequency for V/F mode by the use of input J4-1,J4-2 005.0 ≤ ####. ≤ 75.0
		1 ####.	OK / ERR	Set a new output frequency in Hz (output must be run and not stored in memory) 005.0 ≤ ####. ≤ 075.0
		2 ####.	OK / ERR	Set a new output voltage in Volts (output must be run and not stored in memory) 040.0 ≤ ####. ≤ 230.0
		3 ####.	OK / ERR	Set a new output frequency in Hz in mode V/F (output must be run and not stored in memory) 005.0 ≤ ####. ≤ 075.0
		4 ####.	OK / ERR	Changes the output phase order (output must be run and not stored in memory) <b>111.1</b> → Phase RST (direct phase) <b>222.2</b> → Phase SRT (reverse phase)


## OTHER PORTS PENDING

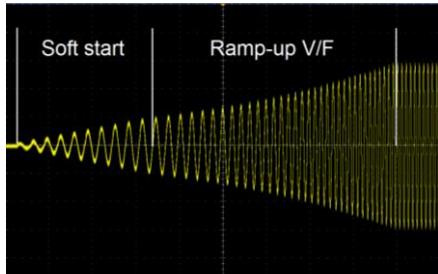**Note 1:**


Example for N=1: start-up time =  $N \times 1.7\text{s}$  for changes from 16Hz to 50Hz

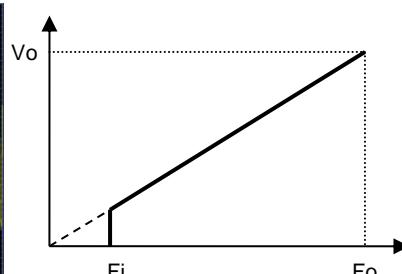

Mode V/F curve

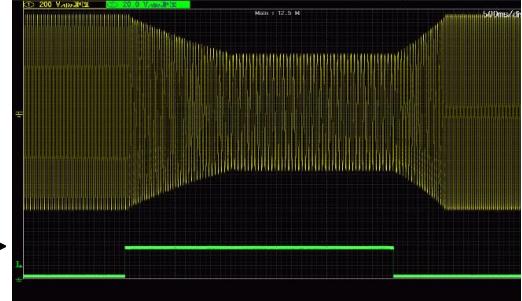**Note 2 :**


Example for change from 50Hz / 400V to 30Hz and 240V with ramp-down of 2 cycles /Hz and ramp-up de 1 Cycle/Hz. Yellow: output voltage and Green: Mid-Power input signal

## WORKING PARAMETERS


Thermal protection				
Internal warning temperature (output alarm)		88		°C
Internal shutdown temperature		92		°C
Internal restart temperature		75		°C
Internal temperature of fan start-up		45		°C
Input voltage parameters				
High input voltage shutdown instantaneous	24V	48V	72V	110V
High input voltage timed shutdown (t) (Input alarm)	33.6	62.4	93.6	143.0
<u>Start-up voltage</u>	31.2	60.0	90.0	137.5
<u>Low input voltage timed shutdown (t) (Input alarm)</u>	19.2	38.4	57.6	88.0
<u>Low input voltage instantaneous shutdown</u>	16.8	33.6	50.4	77.0
Low input voltage instantaneous shutdown	14.4	28.8	43.2	66.0
Time to shutdown (t)		500		ms
Output voltage parameters				
Output voltage phase-neutral		230		Vac
Output under-voltage shutdown		< 85% of setting 1000ms		
Warning voltage (output alarm)		< 90% of setting 200ms		
<u>Initial start-up frequency</u>		5		Hz
Soft start duration		1 cycles		
<u>Ramp-up V/F</u>		1 Hz/cycle		
Output current parameters				
<u>Maximum continuous output current</u>	6.52	8.66	8.66	8.66
<u>Warning current (output alarm)</u>	6.20	8.22	8.22	8.22
Maximum overload $I^2t$		See figure below		
Time between restart attempts		4000		ms
Number of attempts of consecutive overload		5		
Working failures and reset				
Lock for continuous overload or internal failure		Unlimited time		
Reset time by input disconnection		> 2		
Configurable parameters underlined				

## OVERLOAD PROTECTION

Protection against overloads and short-circuits	By <b>current</b> limiting at $I_{opk}$ . By <b><math>I^2t</math></b> . The unit shutdowns when the current-time is over the continuous operation curve	
Overload protection recovery	Every 4 seconds after shutdown, the unit tries to restart up to 5 times. If the overload persists, the unit remains shutdown until an <b>input reconnection</b> .	




## DIMENSIONS

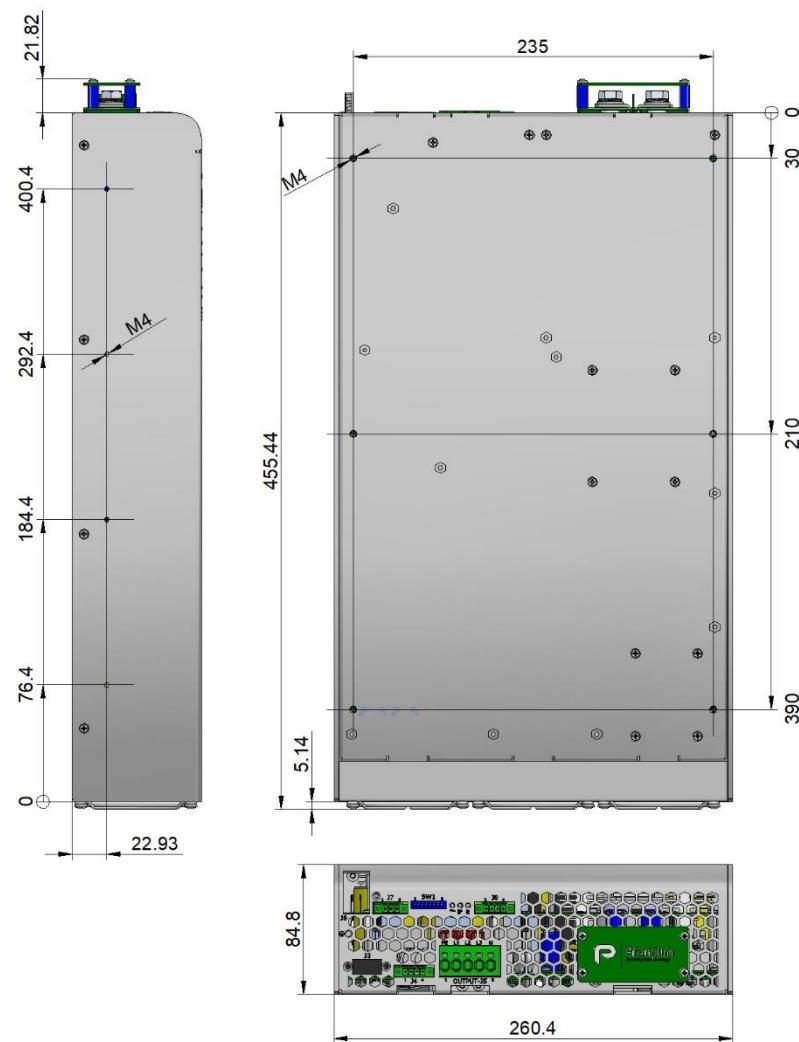

## ACCESSORIES

Description	Notes	CODE
Mounting brackets kit	Contains two brackets and screws	NP-9282

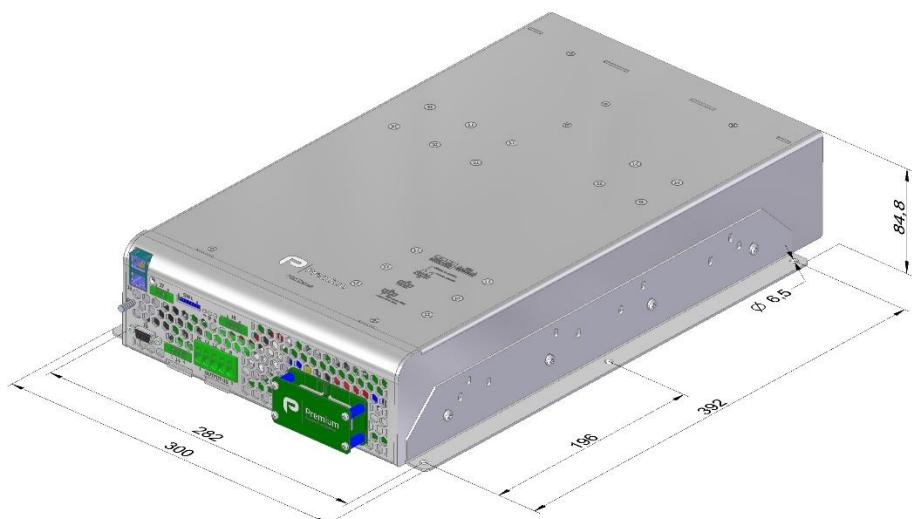



## CE EU DECLARATION OF CONFORMITY

The undersigned, representing the following:

Manufacturer: PREMIUM, S. A.,  
Address: C/ Dolors Aleu 19-21, 08908 L'Hospitalet de Llobregat, SPAIN

herewith declares that the product:

Type: DC/DC converter  
Models: **ODX-6000-7502 ... 7507**

is in conformity with the provisions of the following EU directive(s):

2014/35/EU	Low voltage
2014/30/EU	Electromagnetic compatibility
2011/65/EU	Restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS)

and that standards and/or technical specifications referenced overleaf have been applied:

EN 60950-1: 2005	Safety. Information technology equipment
EN 62368-1: 2014	Safety. Audio/video, information and communication technology equipment
EN 61000-6-3: 2007	Generic emission standard
EN 61000-6-2: 2005	Generic immunity standard
EN 50155: 2017*	Railway applications. Electronic equipment used on rolling stock material
EN 50121-3-2: 2016*	Railway applications. EMC Rolling stock equipment

\* Optional, See annexe

CE marking year: **2019**

### Notes:

For the fulfilment of this declaration the product must be used only for the aim that has been conceived, considering the limitations established in the instructions manual or datasheet.

L'Hospitalet de Llobregat, 04-11-2019

Jordi Gazo  
Chief Executive Officer

**PREMIUM S.A.** is an ISO9001 and ISO14001 certified company by **Bureau Veritas**



## ANNEXE

Applicable values for the different sections of the norm EN50155: 2017						
4.3.1	Working altitude	Up to 2000m				
4.3.2	Ambient temperature	Class OT1 (-25 to 55°C): load < 100% Class OT3 (-25 to 70°C): load <62.5% Class OT5 (-25 to 85°C): load <25%				
4.3.3	Switch-on extended operating temp.	ST1				
4.3.4	Rapid temperature variations	H1				
4.3.5	Shocks and vibrations	According EN61373:2010 Category 1 class B				
4.3.6  EMC Electromagnetic Compatibility  EN50121-3-2:2016		<b>Test</b>	<b>Norm</b>	<b>Port</b>	<b>Frequency</b>	<b>Limits</b>
		Radiated emissions	IEC55016	Case	30MHz...230MHz	40dB(µV/m) Qpk at 10m
					230MHz...1GHz	47dB(µV/m) Qpk at 10m
					1...3GHz	Do not apply
		Conducted emissions	IEC55016	Input	3...6GHz	Internal freq. < 108MHz
					150kHz...500kHz	99dB(µV) Qpk
		Fast transients	IEC61000-4-4	X/Y/Z Axis	500kHz...30MHz	93dB(µV) Qpk
					150kHz...500kHz	99dB(µV) Qpk
		Surge	IEC61000-4-5	Input L to L Input L to PE	±2kV	Air (isolated parts)
					±8kV	Contact (conductive parts)
4.3.7  DC power supply range  5.1.1.2  5.1.1.3  5.1.1.4  5.1.1.6  5.1.3  7.2.7  10.7		Radiated high-frequency	IEC61000-4-3	X/Y/Z Axis	20V/m	0.08...1.0GHz M. 80% 1kHz
					10V/m	1.4...2.1GHz M. 80% 1kHz
		Fast transients	IEC61000-4-4	Input Output Signal PE	5V/m	2.1...2.5GHz M. 80% 1kHz
					3V/m	5.1...6GHz M. 80% 1kHz
					±2kV	Tr/Th: 5/50 ns
					±2kV	
		Conducted RF	IEC61000-4-6	Input Output Signal PE	10V	0.15...80MHz M. 80% 1kHz
					10V	
					10V	
					10V	
		Magnetic field	IEC61000-4-8	X/Y/Z Axis	300A/m	0Hz, 16.7Hz, 50/60Hz
<b>P</b> = Performance criteria, L= Line, PE= Protective Earth						
4.3.7	Relative humidity	Up to 95%				
5.1.1.2	DC power supply range	From 0.70 to 1.25 Un continuous				
5.1.1.3	Temporary DC power supply fluctuation	From 0.60 to 1.40 Un 0.1s				
5.1.1.4	Interruptions of voltage supply	From 1.25 to 1.40 Un 1s without damage				
5.1.1.6	Input ripple factor	Class S1 (without interruptions)				
5.1.3	Supply change-over	10% peak to peak with a DC Ripple Factor of 5 %				
7.2.7	Input reverse polarity protection	0.6 Un duration 100 ms (without interruptions). Performance criterion A				
10.7	Protective coating for PCB assemblies	By external fuse				
13.3	Tests list	1 Visual Inspection 2 Performance test 3 Power supply test 4 Insulation test 5 Low temperature storage test 6 Low temperature start-up test 7 Dry heat test 8 Cyclic damp heat test 9 Salt mist test 10 Enclosure protection test (IP code) 11 EMC test 12 Shocks and vibrations test 13 Equipment stress screening test 14 Rapid Temperature variation test			Routine Routine Routine Routine - Type Type Type - - Type Type Type Routine: 24h at 40°C and load 100% Type	